


# Technic Baseplate 48x48


Building instructions

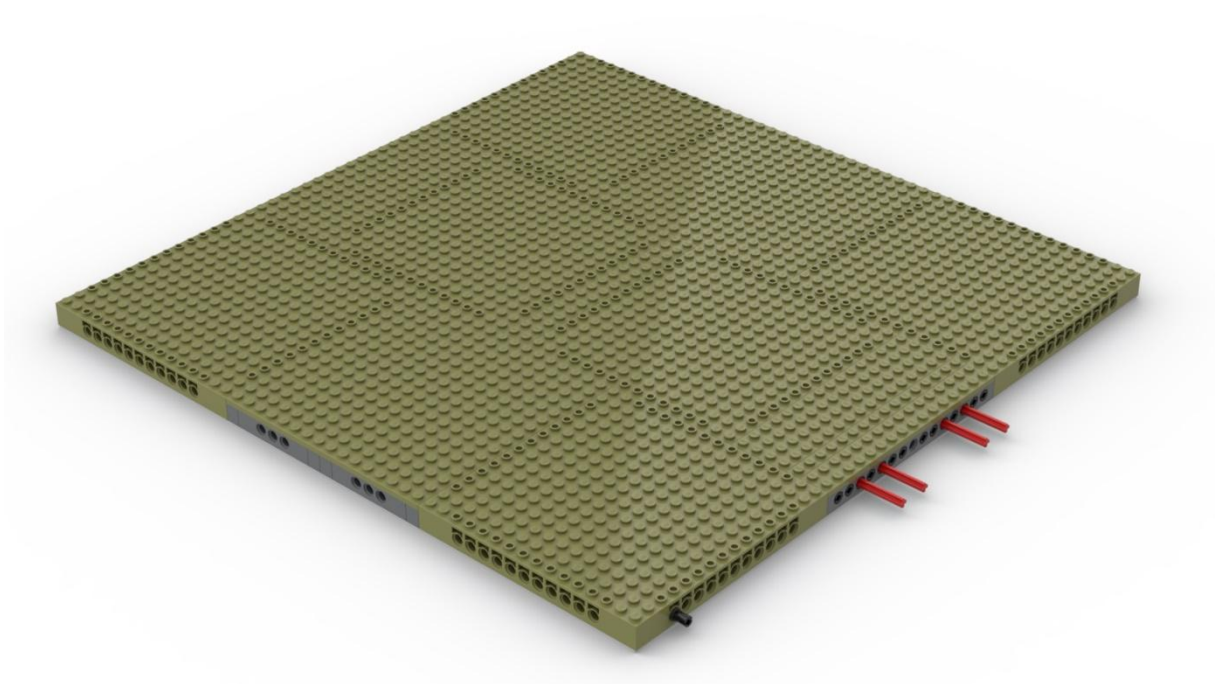



Design by Magnus Karlsson.

Instructions by Magnus Karlsson.



1

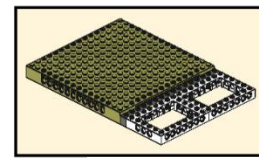


4x

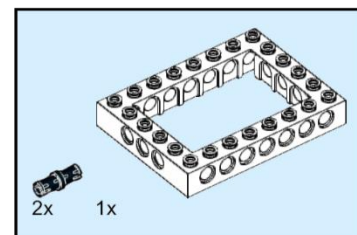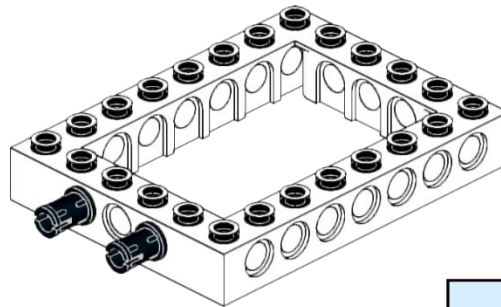



2

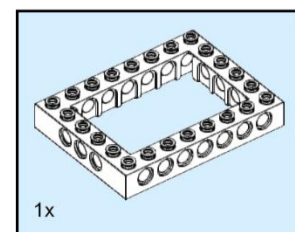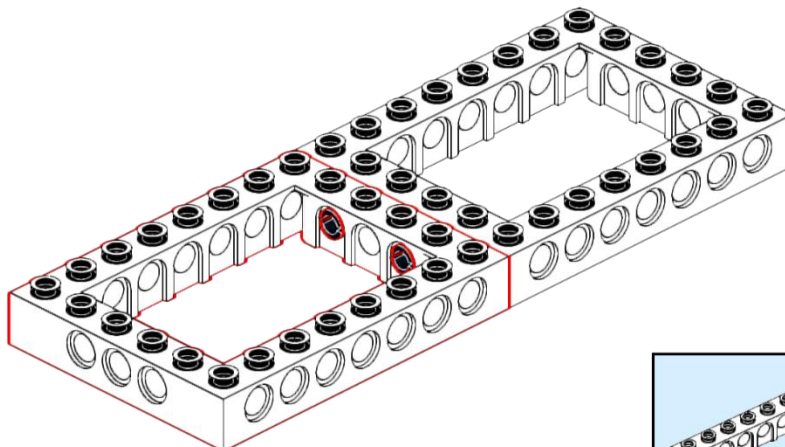



3

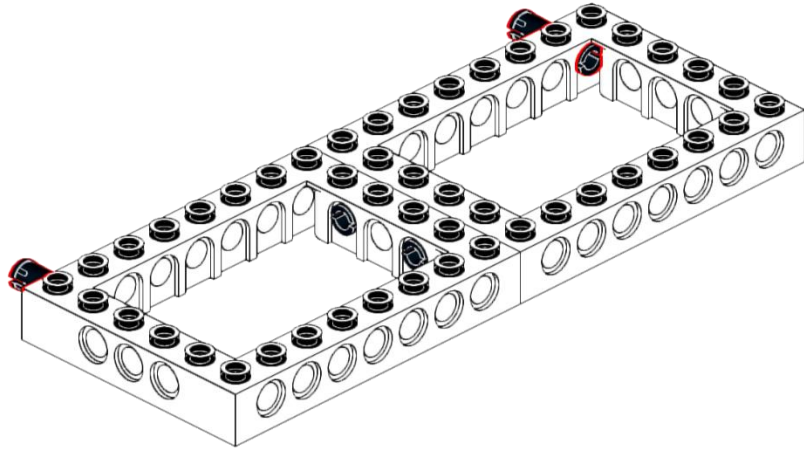



4

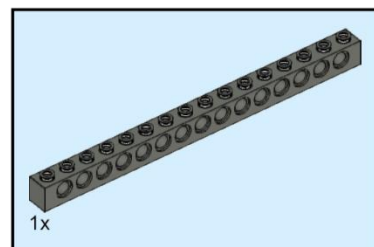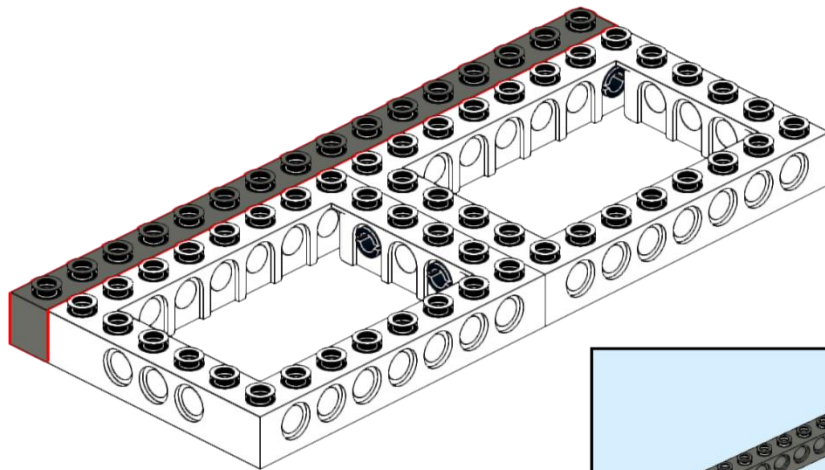


5

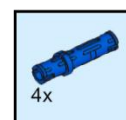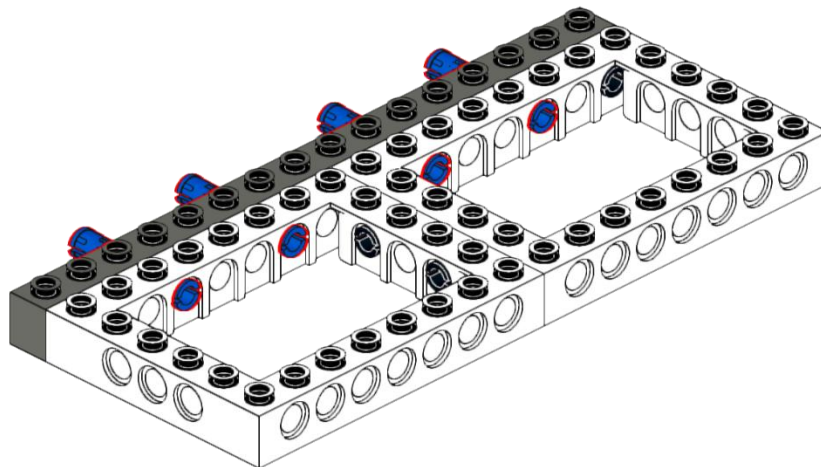



6

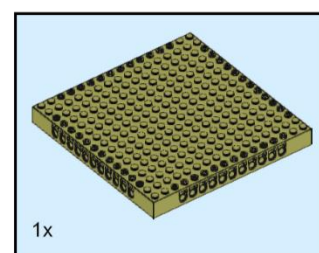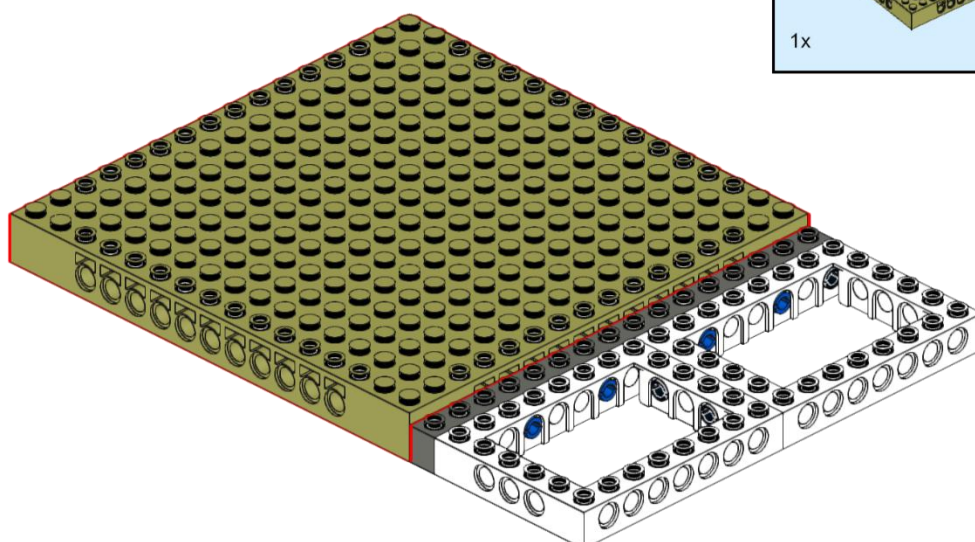

7

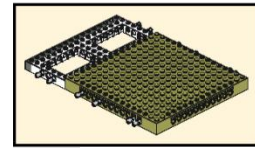



2x

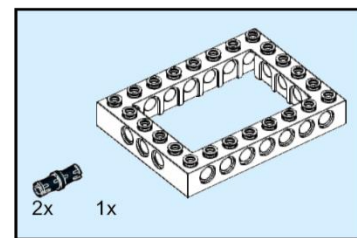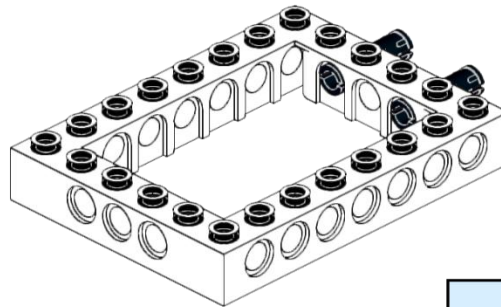

2x

1x


8

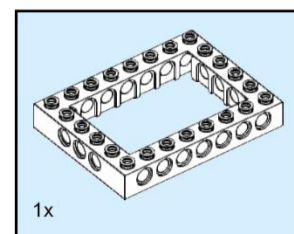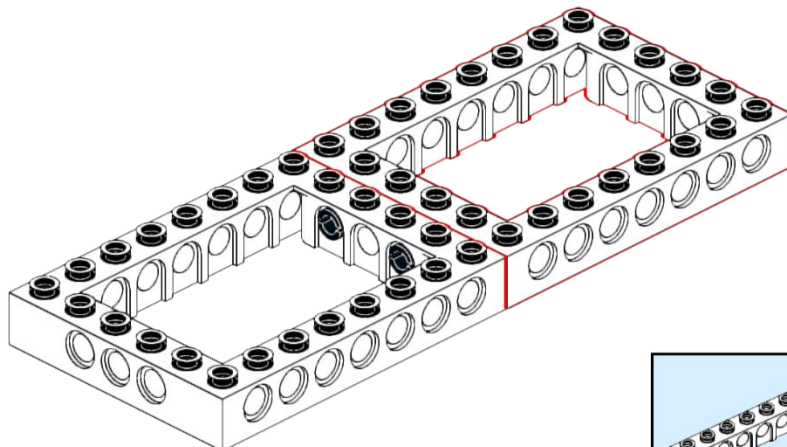



1x

# 9


*Yes, this is excessive.  
However, they are  
also stop pins.*

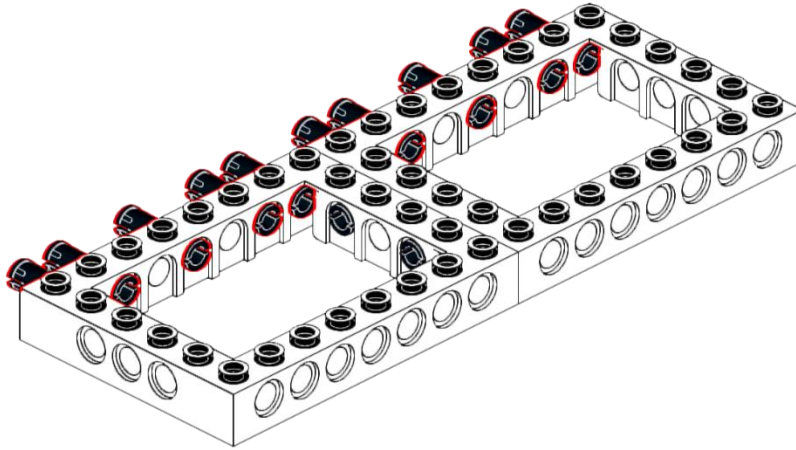



# 10

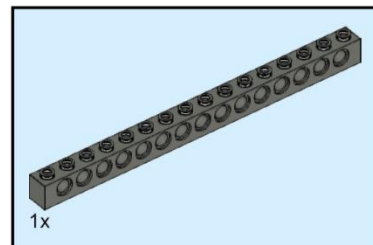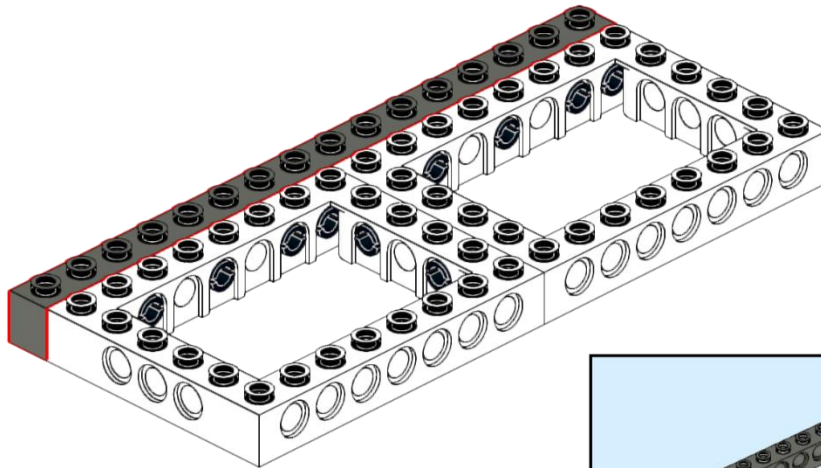


# 11

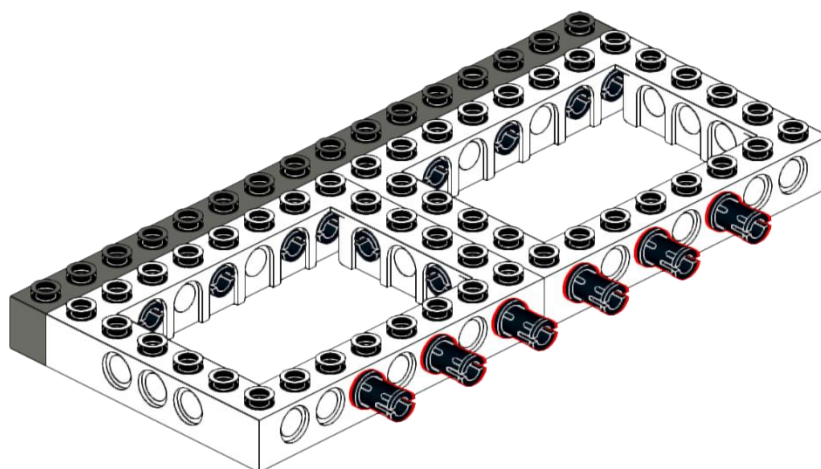



# 12

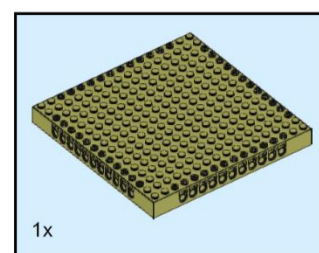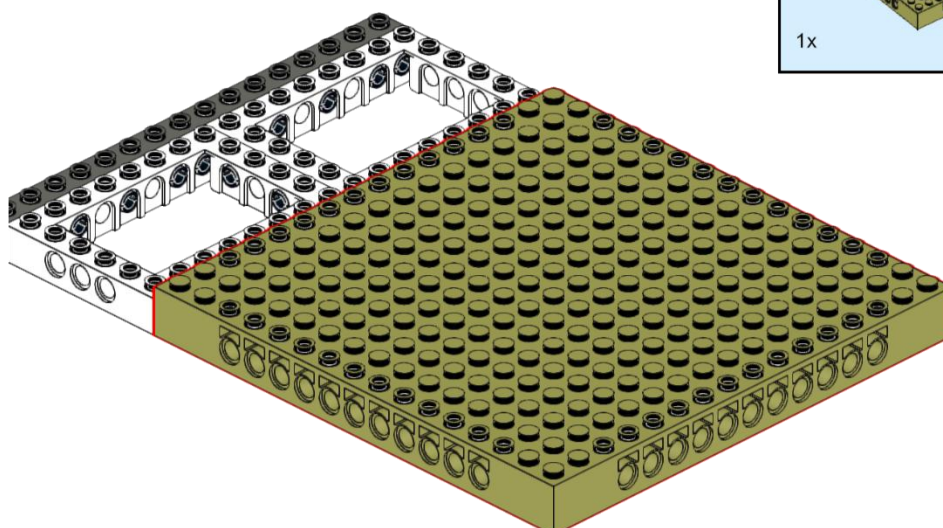

# 13

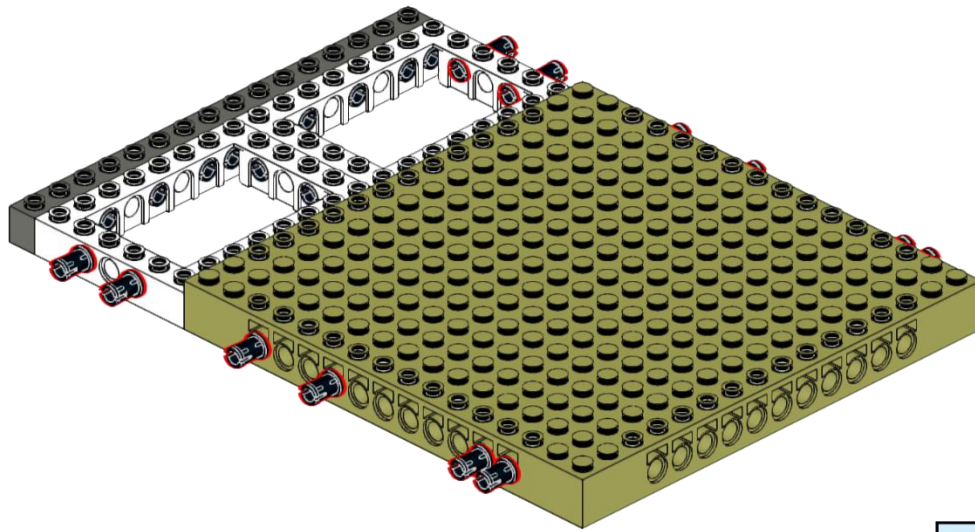


# 14

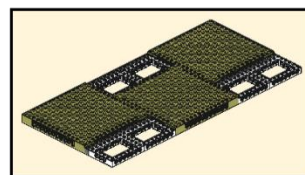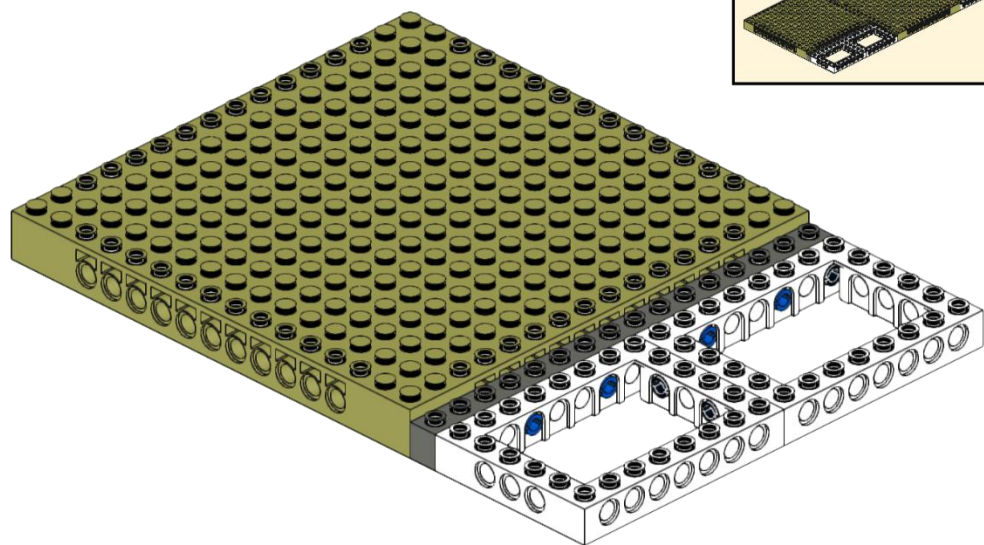


2x


# 15

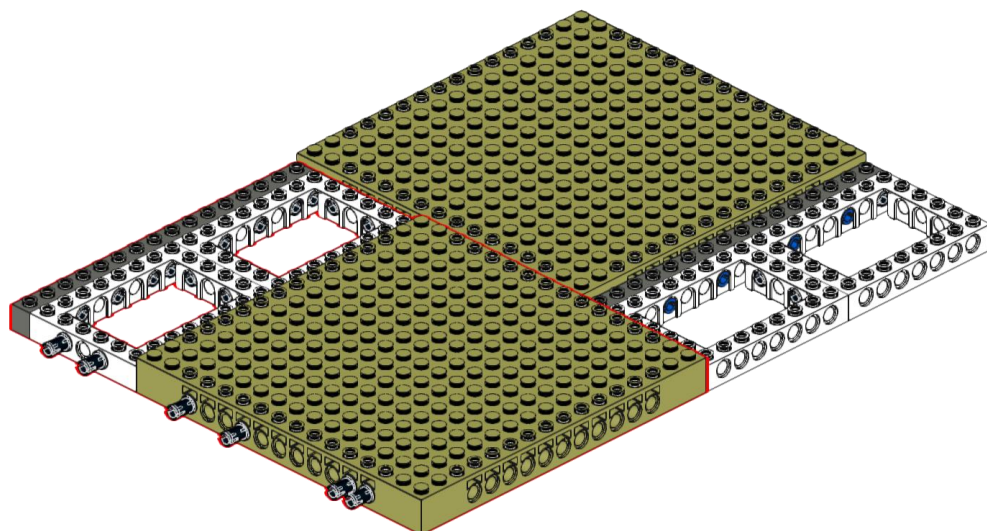




# 16

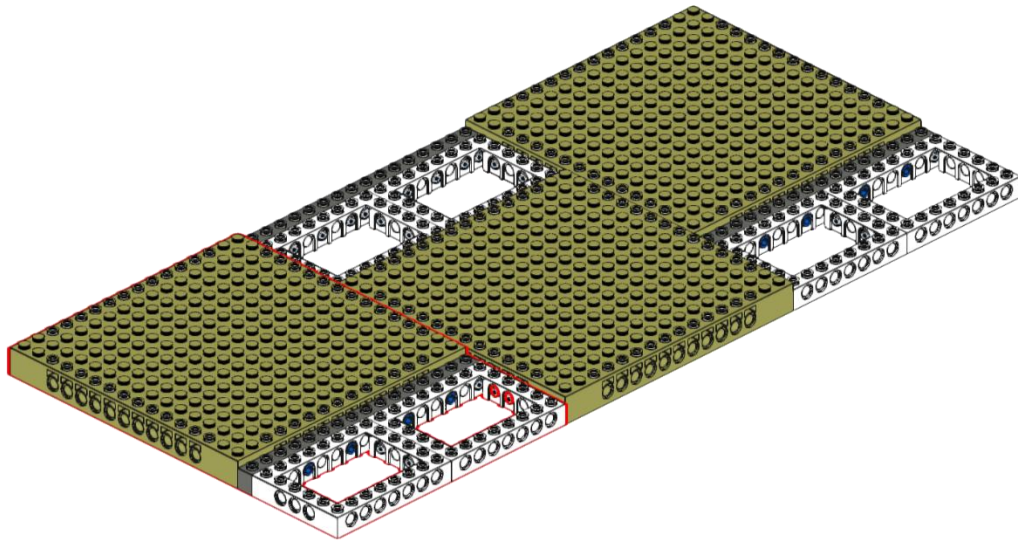



# 17

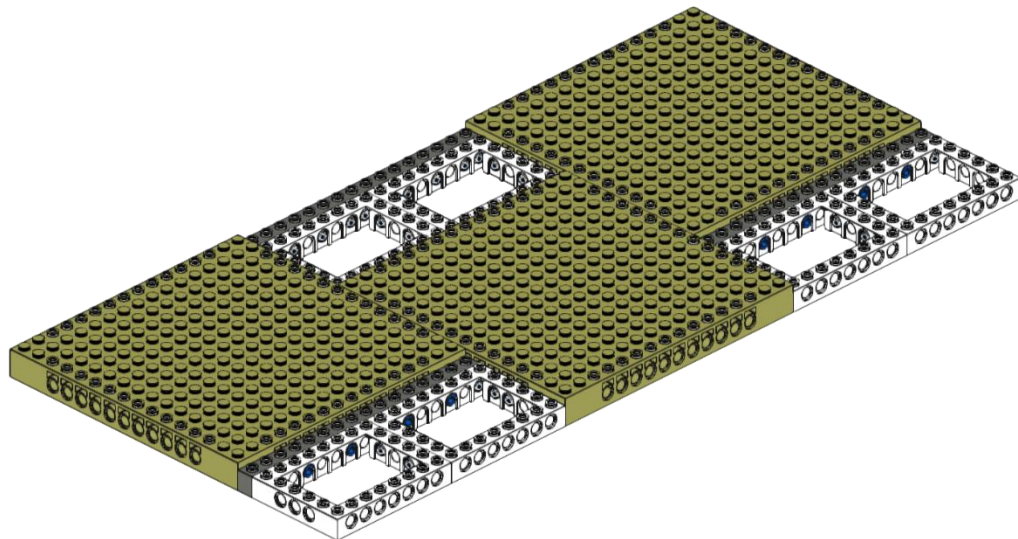


# 18

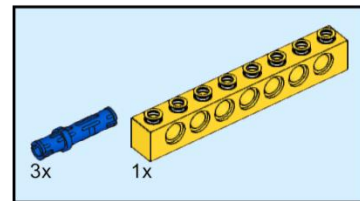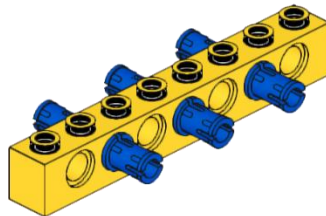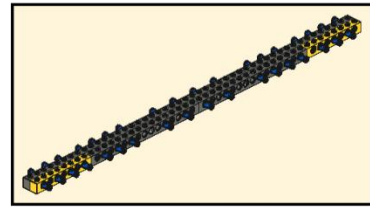



# 19

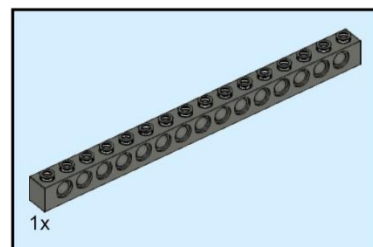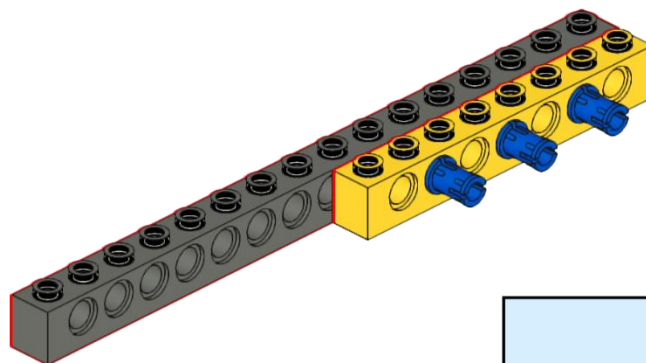



# 20

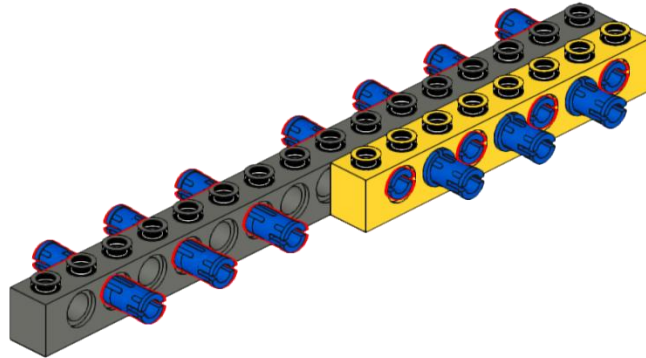



# 21

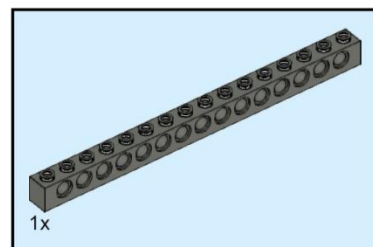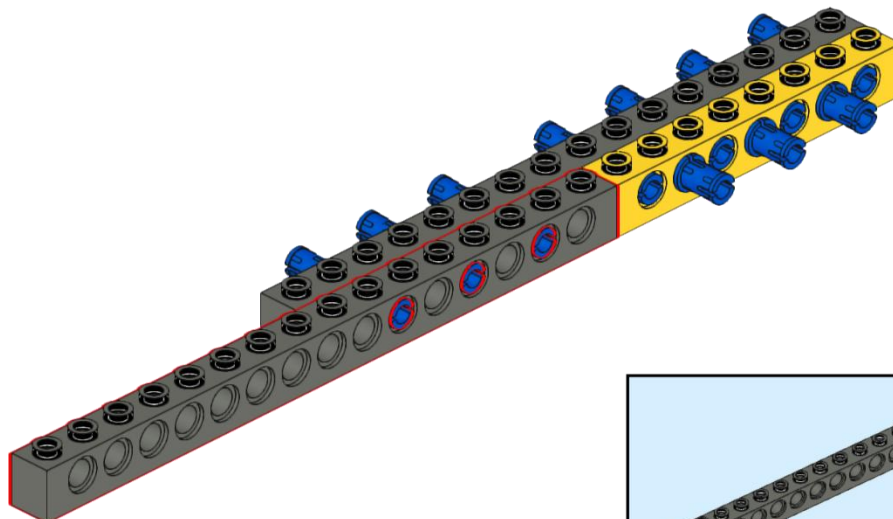



# 22

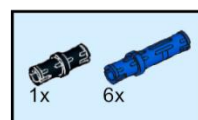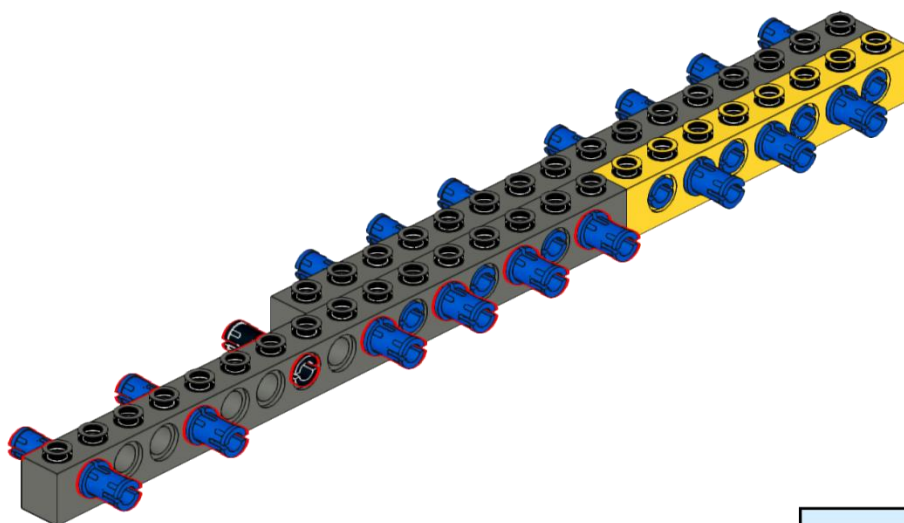



# 23

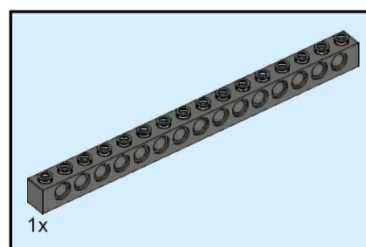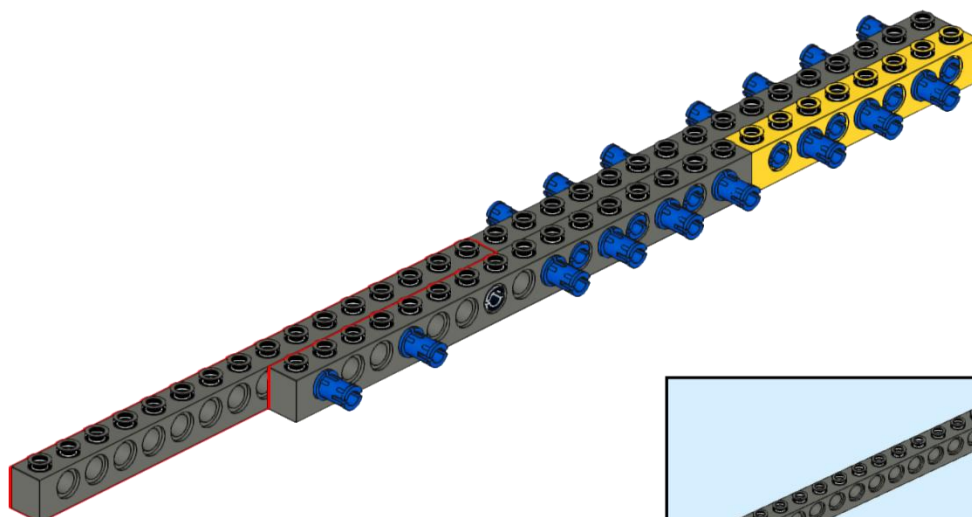



# 24

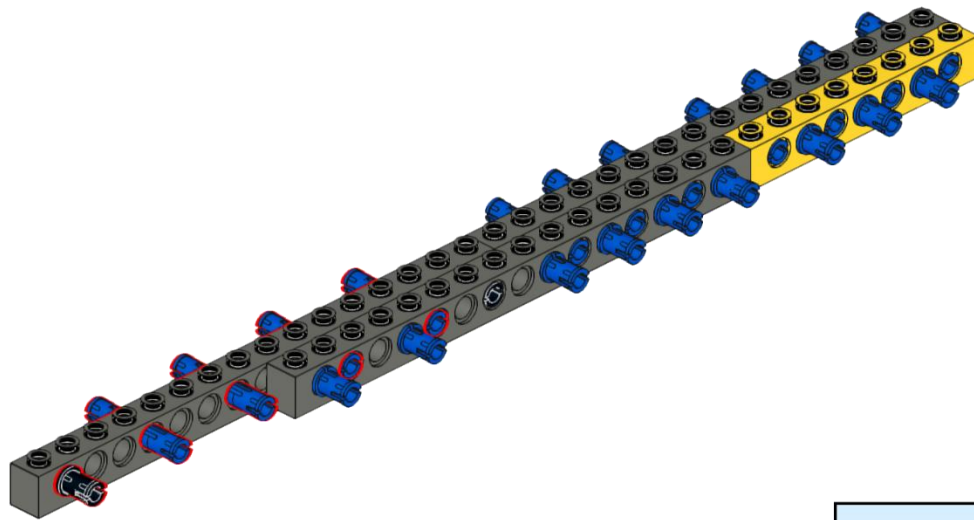



# 25

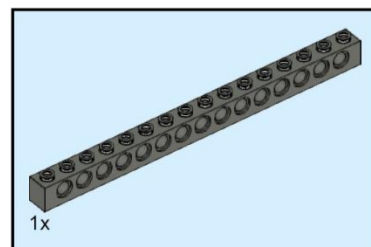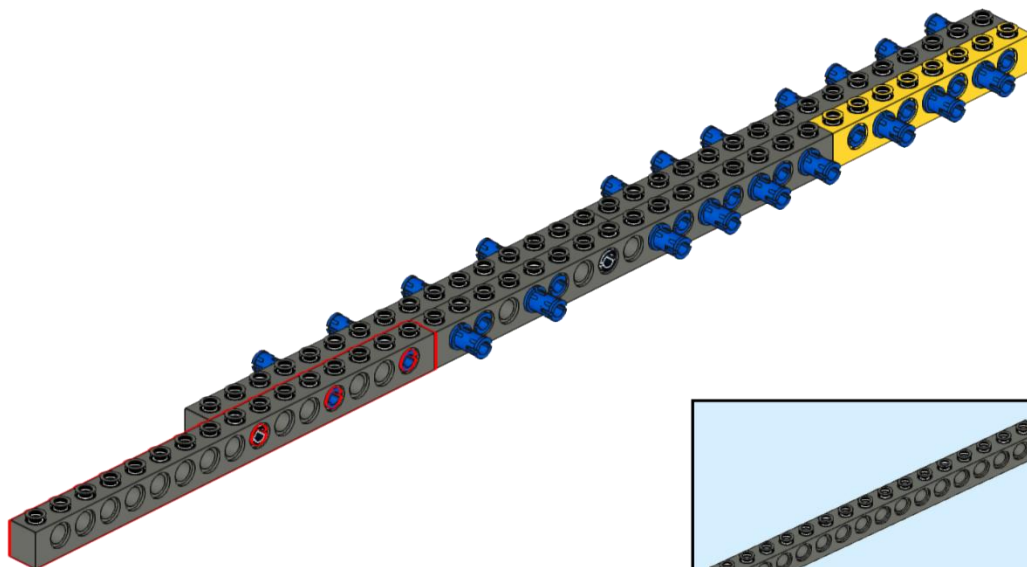



# 26

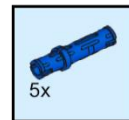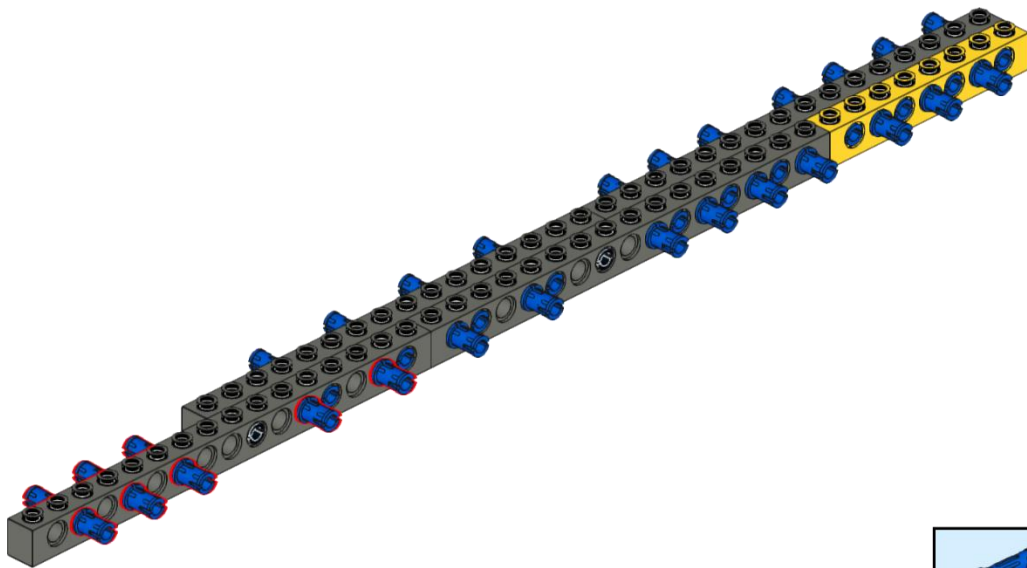



# 27

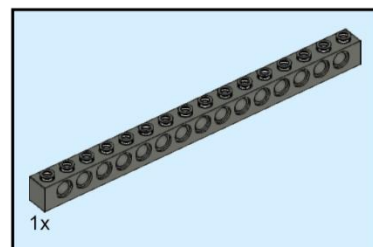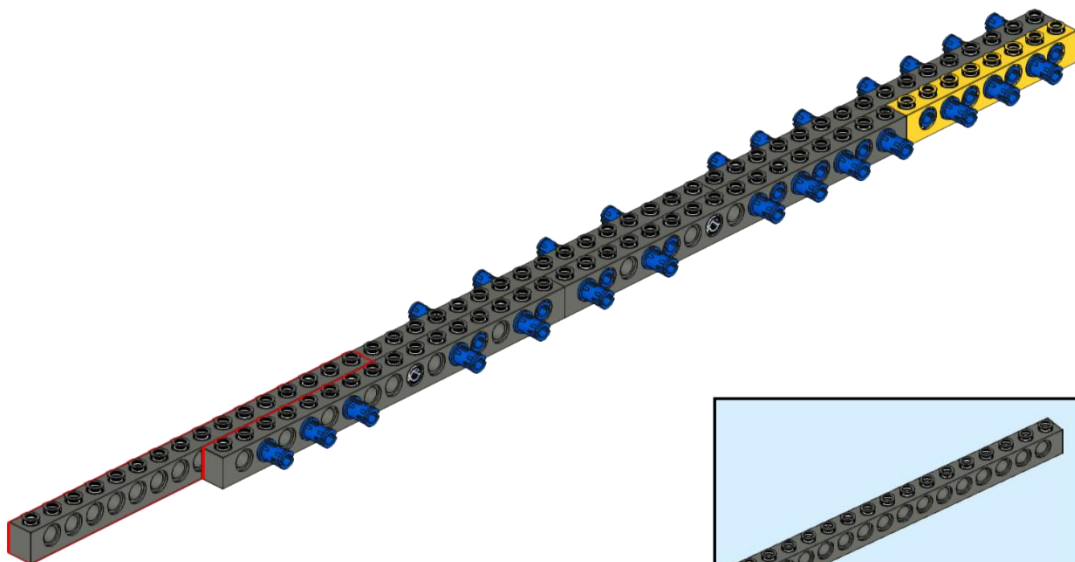



# 28

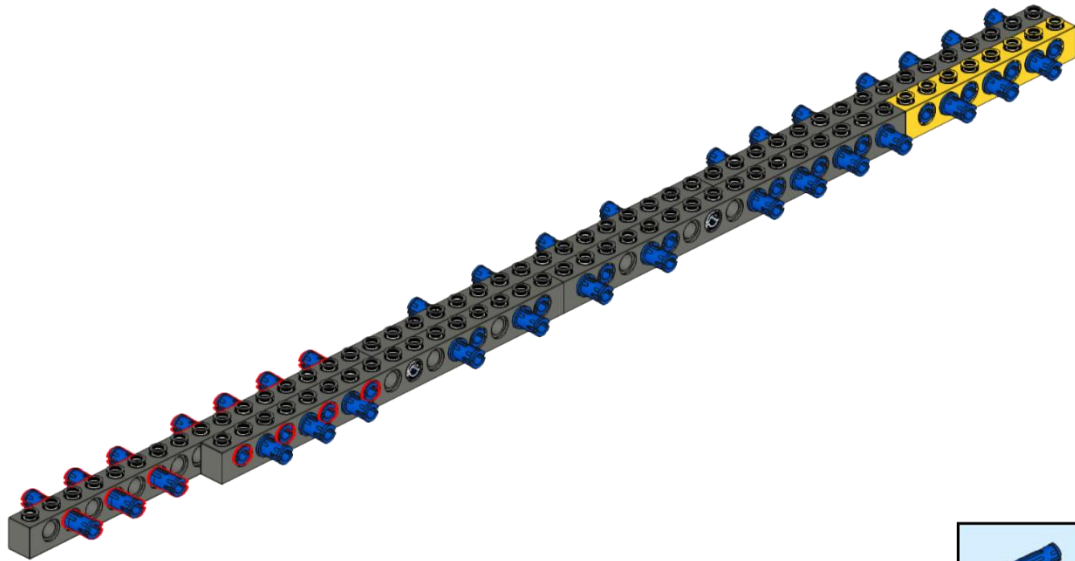


# 29

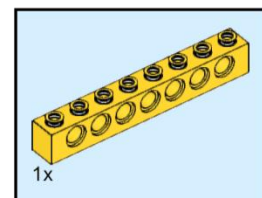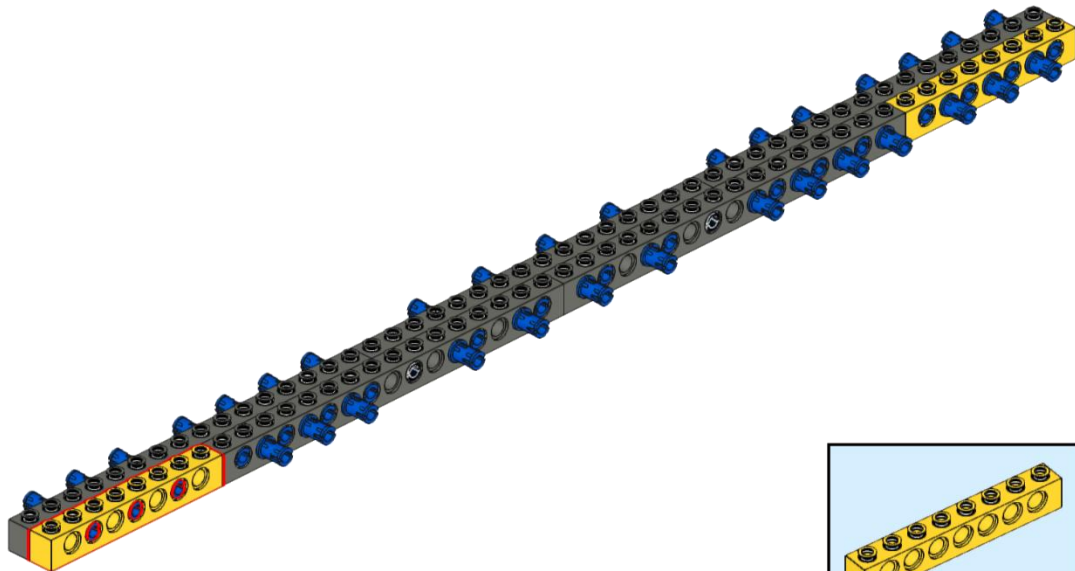


# 30

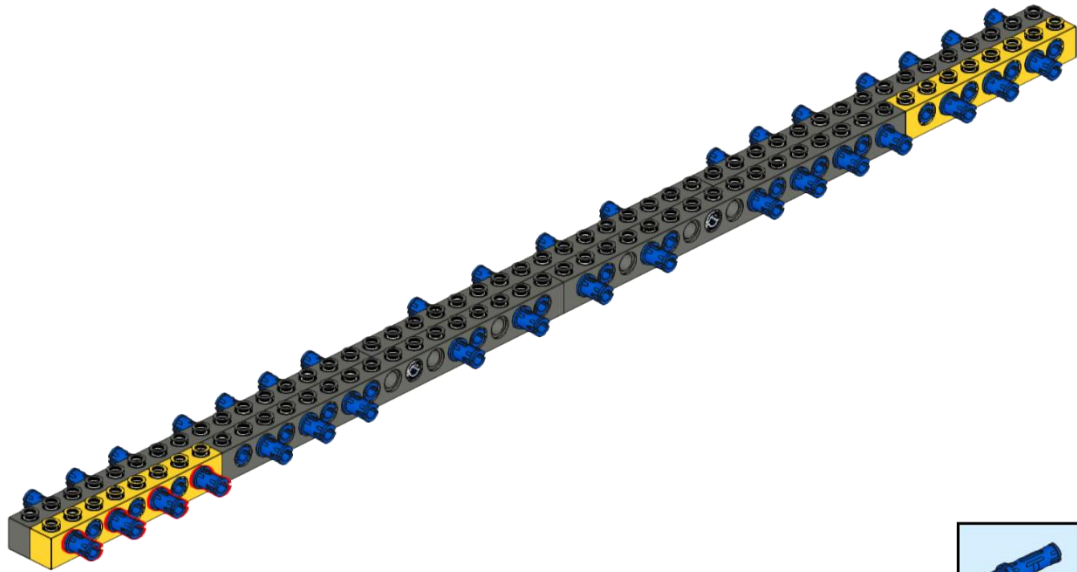


# 31

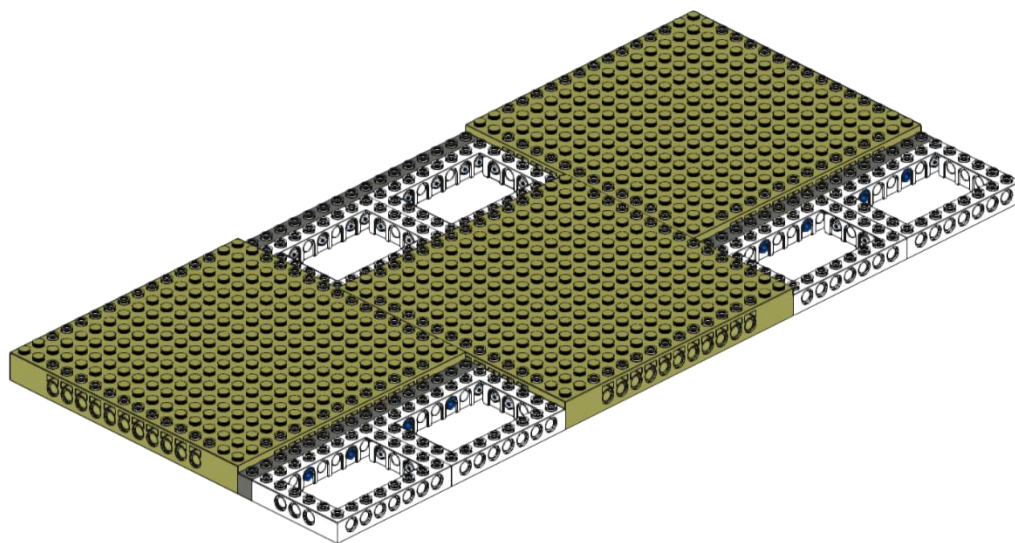



# 32

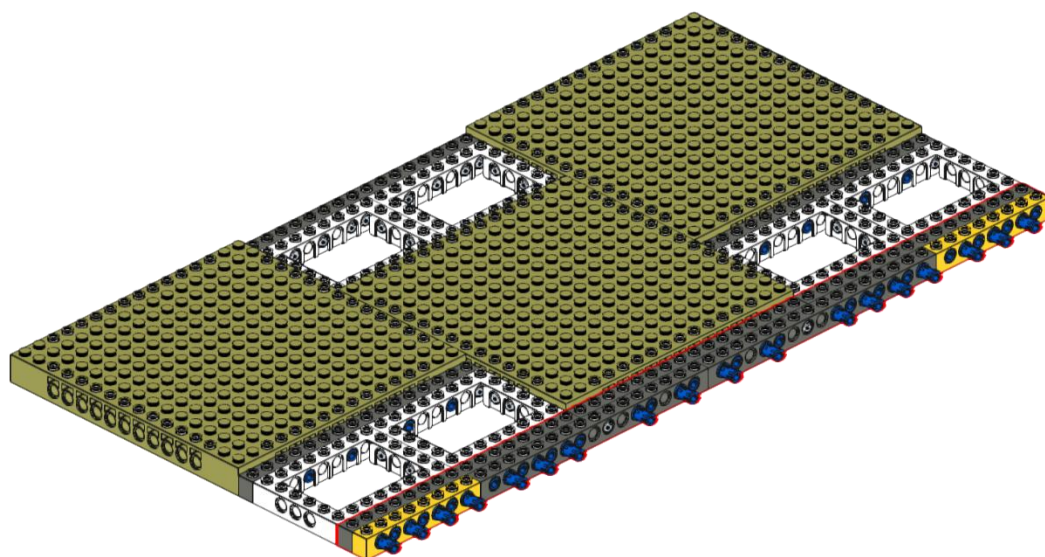


# 33

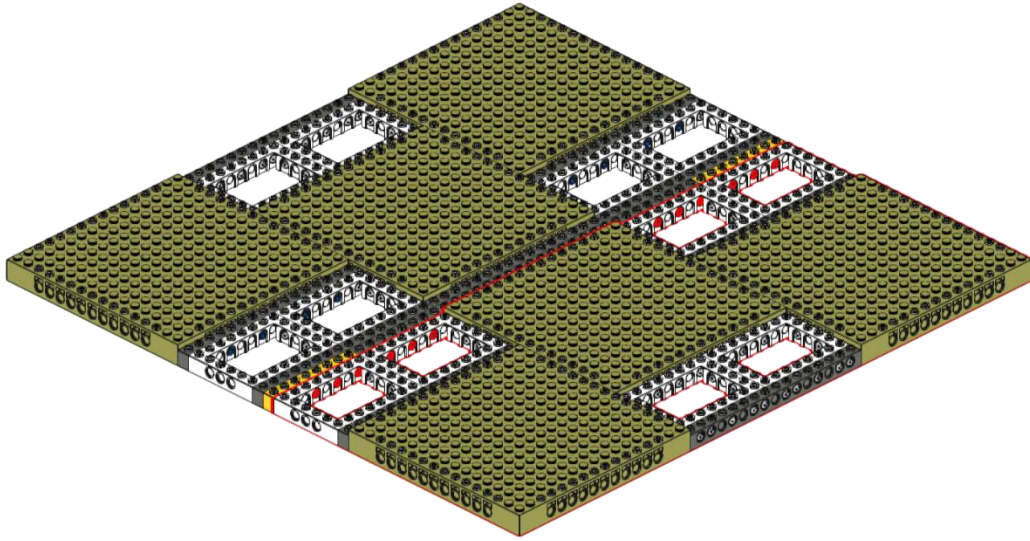


# 34

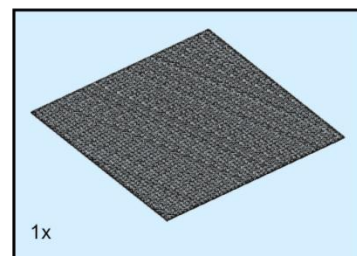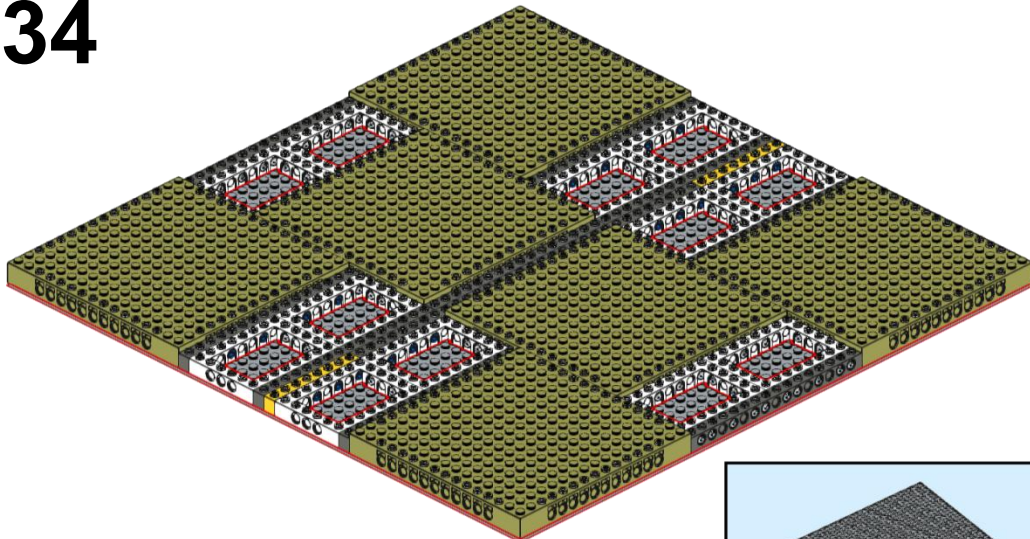


# 35

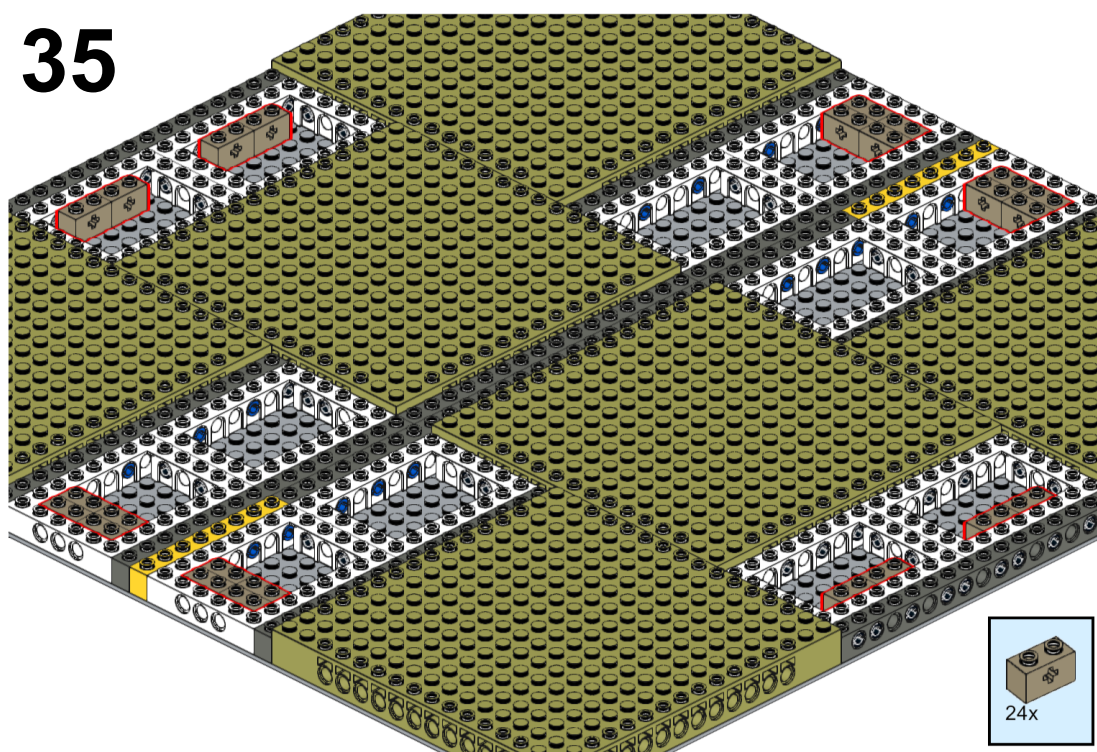


# 36

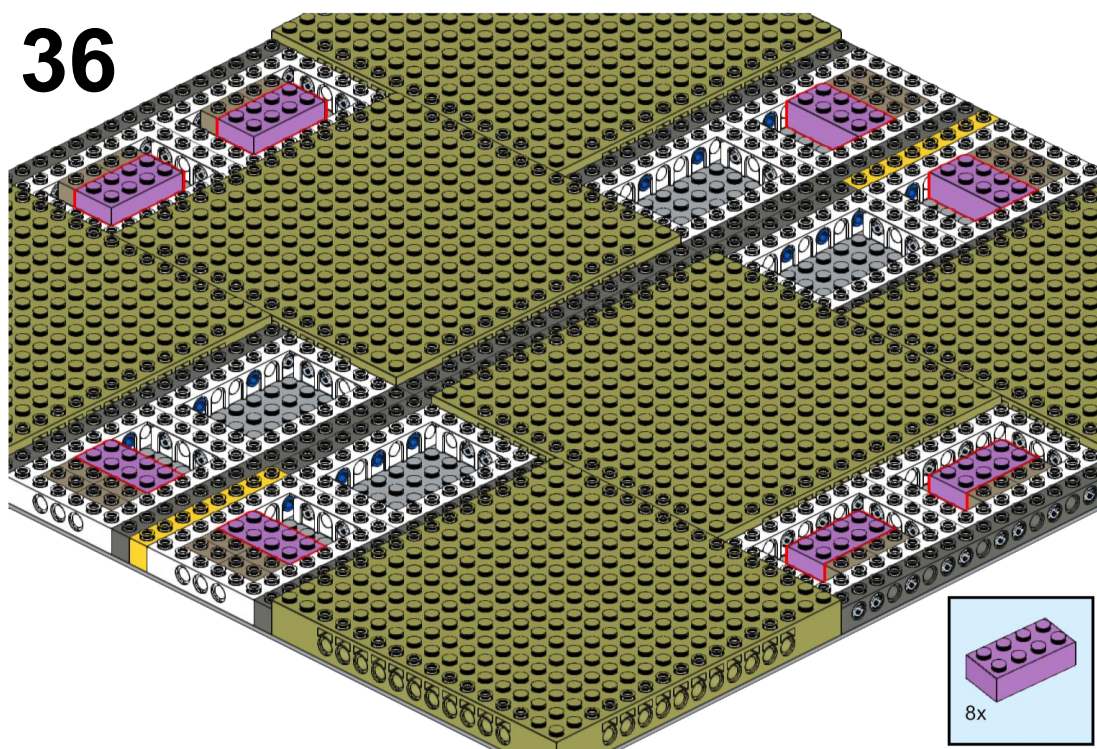


# 37

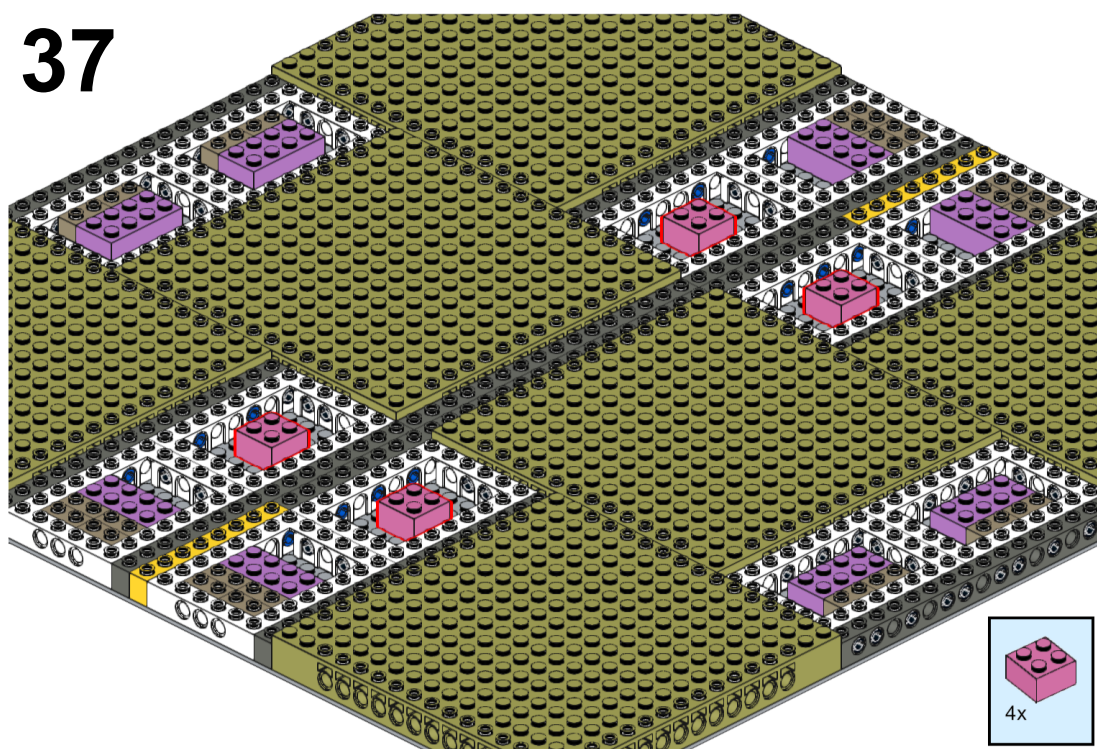


# 38

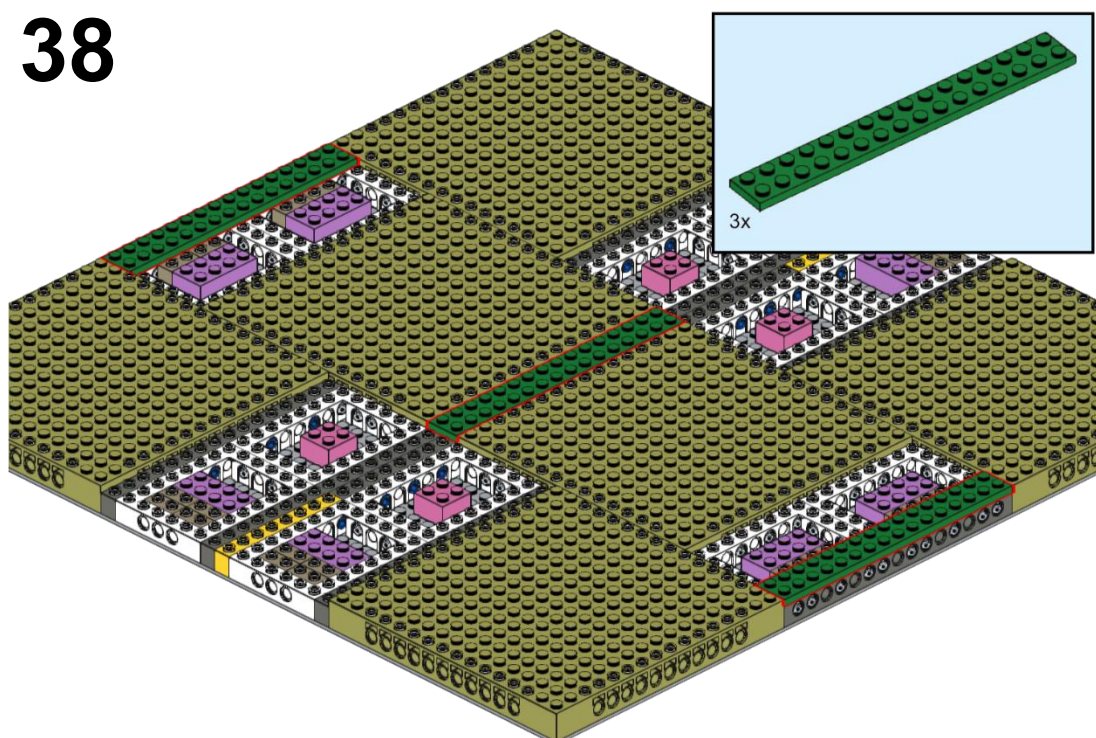


# 39




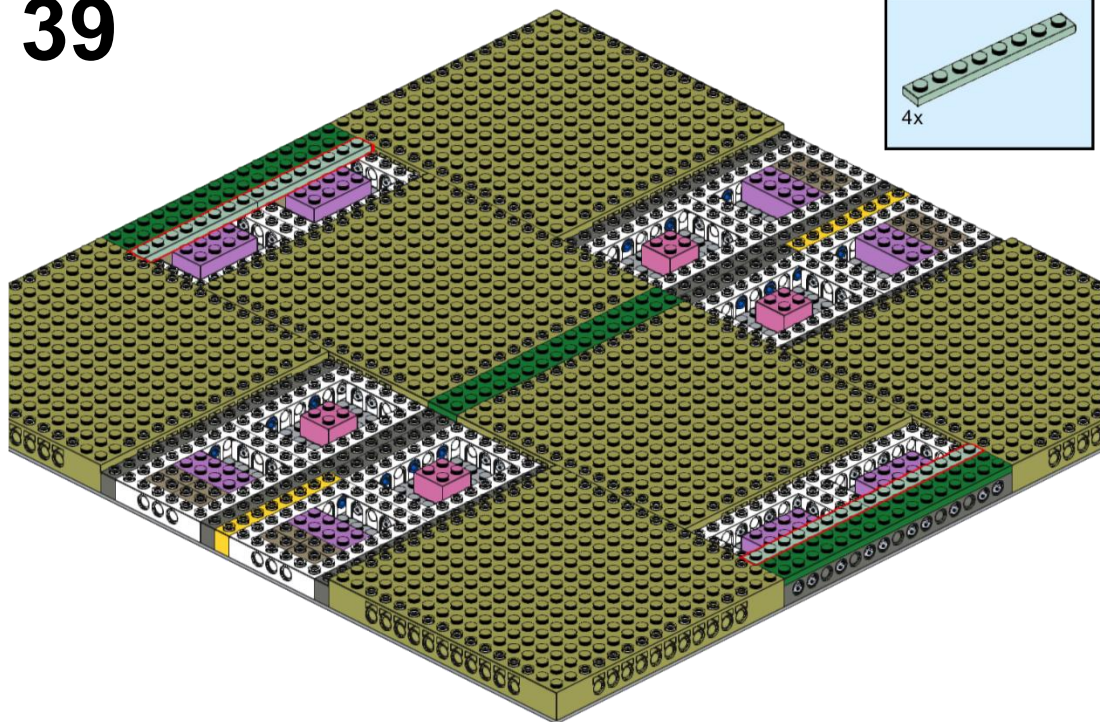



# 40

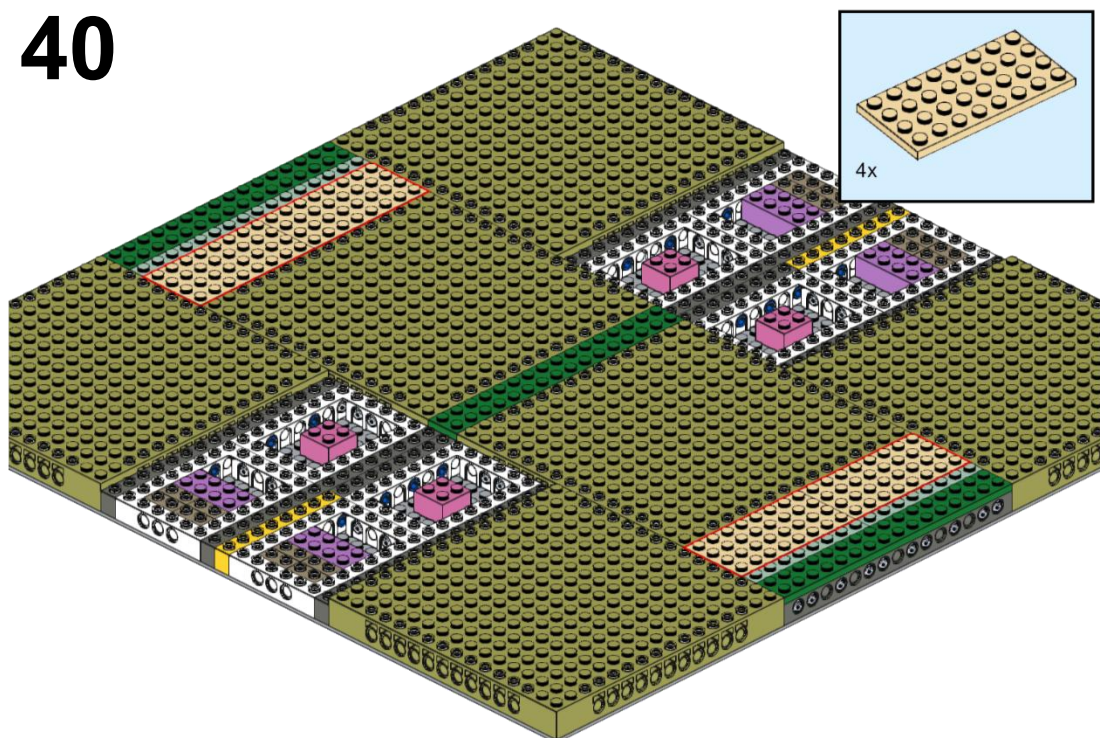

# 41

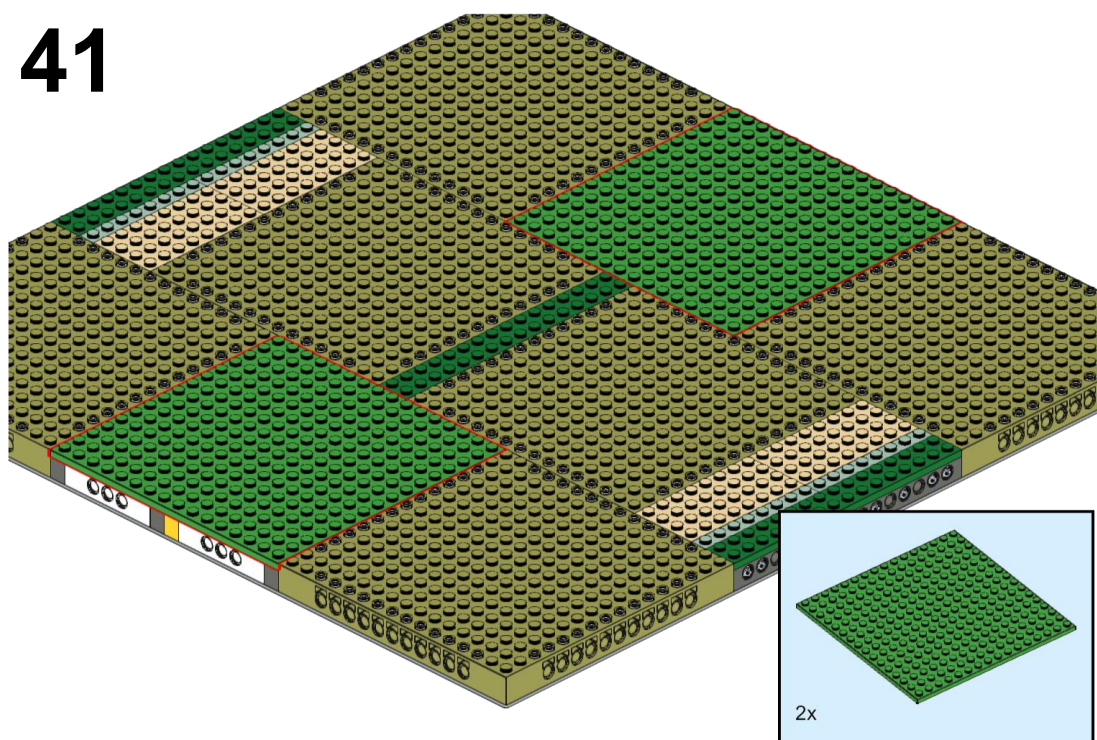

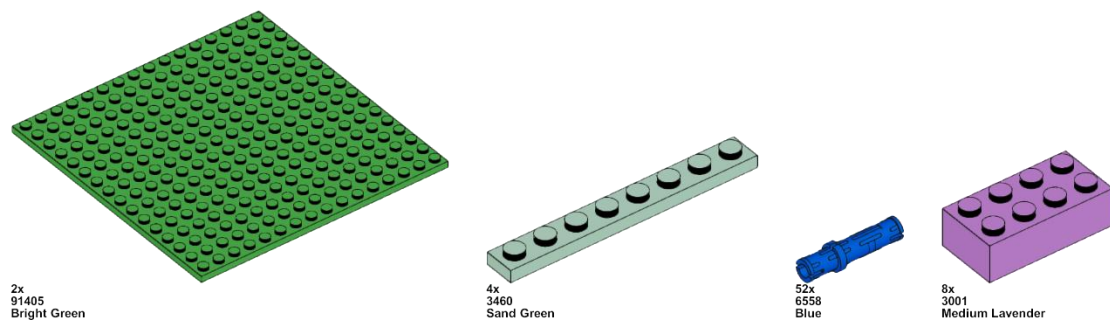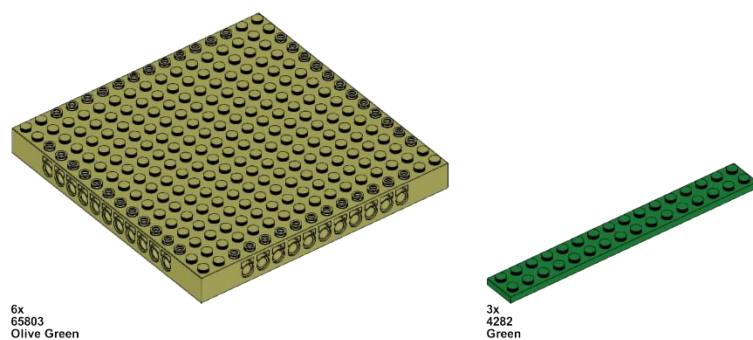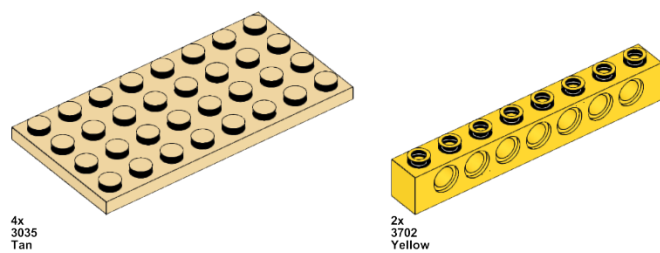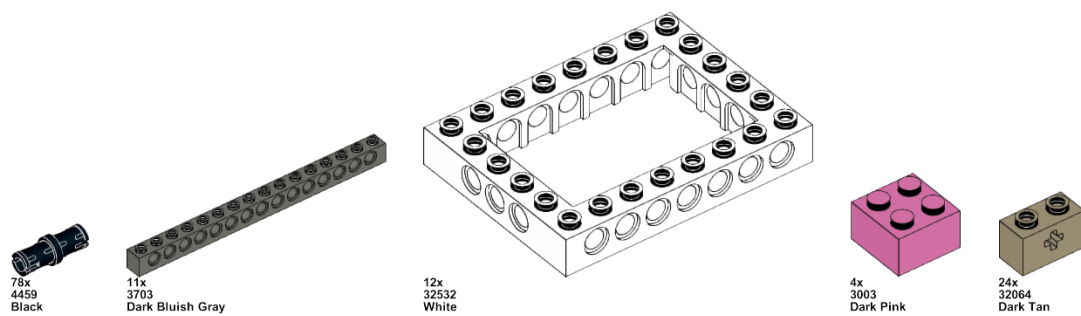

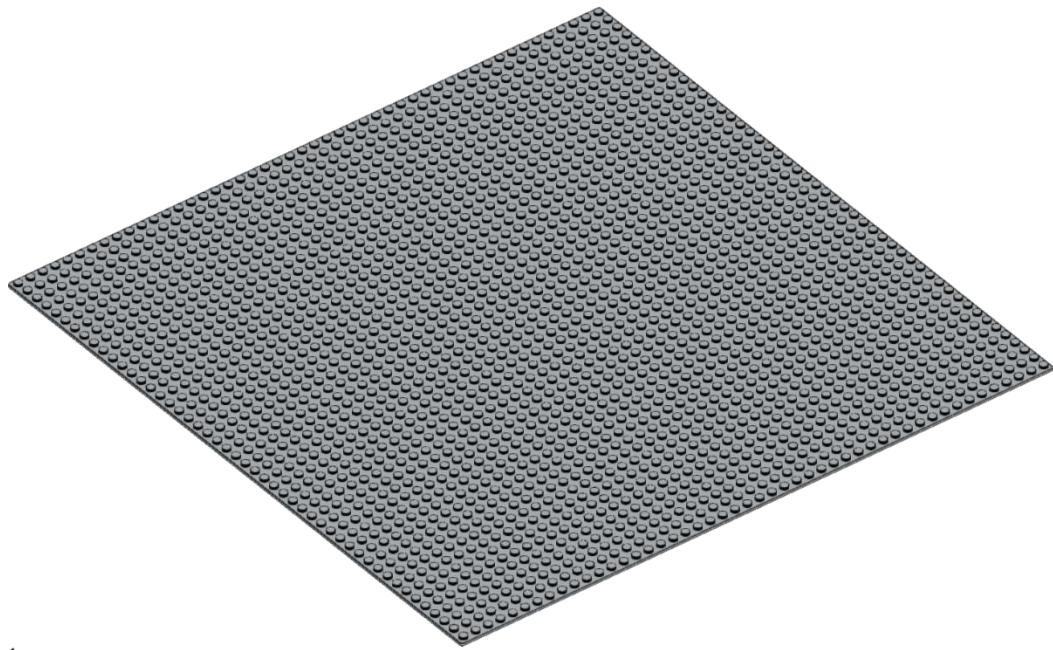

1x  
4186  
Light Bluish Gray